



EPSON® PowerLite® 7850p Quick Setup

1 Turn On Your Equipment


- 1 Connect the power cord to the back of the projector and plug the other end into a grounded outlet.

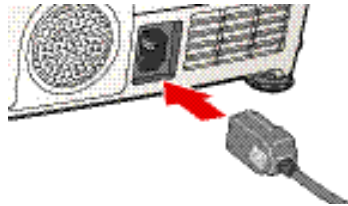


- 2 Remove the lens cover.

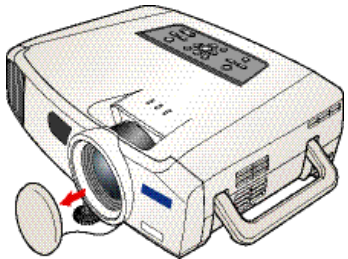

- 3 Remove the battery cover on the remote control. Locate the batteries that came with the projector and insert them as shown. Then replace the battery cover.

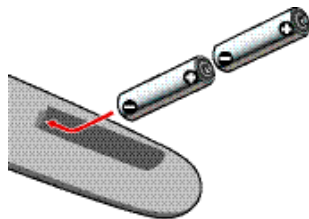

- 4 Push up on the remote control's **ON/OFF** switch to turn it on.

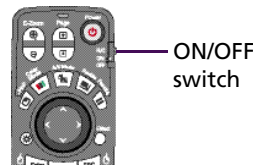

- 5 Aim the remote control at the projector and press the red **Power** button. The projector's **Power** light flashes green and then stays on.

CAUTION: Before unplugging the projector...


To shut the projector down properly:

1. Press the **Power** button twice. Let the projector cool while the power light flashes orange (about 30 seconds).
2. Once the light stops flashing and stays on, it's safe to unplug the projector.

Never unplug the projector when the **Power** light is green or flashing orange.


2 Adjust the Image



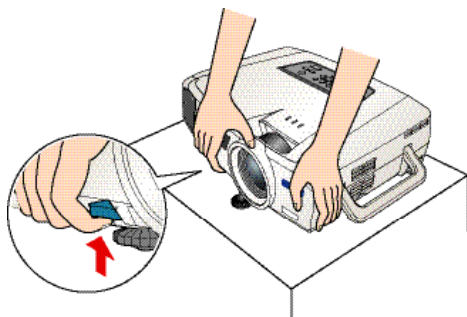



- 1 To raise the image, press the blue foot release button for the front adjustable foot and lift the front. Release the button to lock the foot in position.

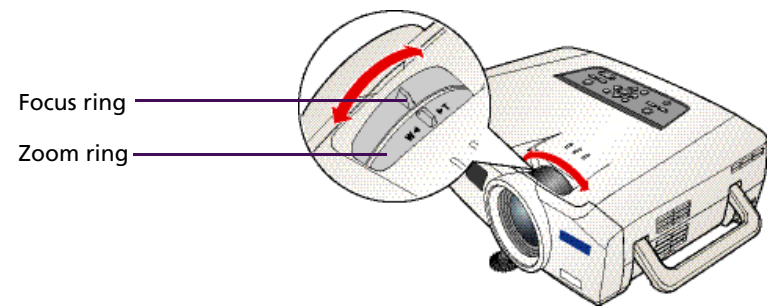

- 2 Rotate the focus ring to sharpen the image.

Rotate the zoom ring to reduce or enlarge the image.




- 3 If your image looks like  or , you've placed the projector off to one side of the screen at an angle. Place it directly in front of the screen, facing the screen squarely.
- 4 If your image looks like  or , press the  or  **Sync** buttons on the projector.


3 Choose a Presentation Method

How do you want to get images to the projector?

- To connect to a laptop, see "If connecting to a laptop" below.
- To project over an 802.11b network, see "If projecting wirelessly" on the back of this sheet.

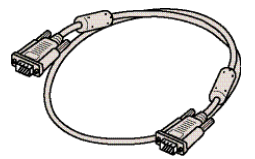


You must have installed the projector's EasyMP™ software and configured your projector and computer before you can project wirelessly. See your *User's Guide* for instructions.

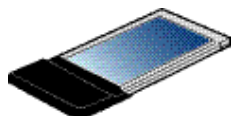


- To give a presentation stored on a memory card, see Chapter 5 in your *User's Guide*.

If connecting to a laptop...


- 1 Make sure you've turned on the projector and adjusted the image as described in sections 1 and 2.
- 2 Locate the VGA cable that came with the projector. Connect one end to the projector's **Computer** port.

Connect the other end to your laptop's video-out port or  monitor port. If you can't connect the cable to your PowerBook®, you may need to use an adapter. See your *User's Guide* for instructions.

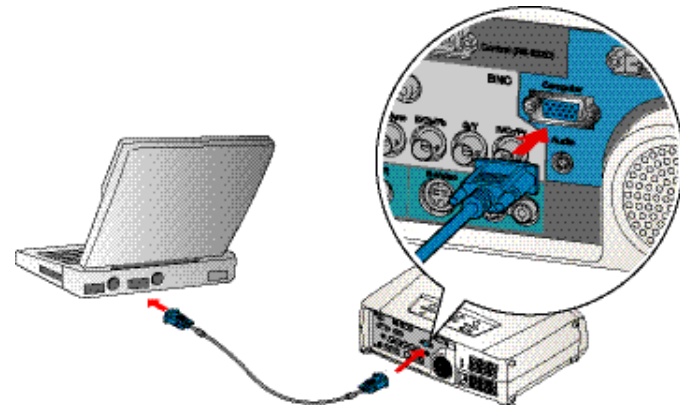


- 3 Press the **Comp** button on the remote control until your computer image is displayed.


4 If you see a blank screen or the **No Signal** message, make sure the power light on the projector is green and not flashing, and the lens cover is off. If the screen is still blank, restart your laptop, or press the **Comp** button on the remote control again. If mute mode is active, press the **A/V Mute** button on the remote control.

Windows®: Hold down the **Fn** button on the keyboard and press the function key that lets you display on an external monitor. It may have an icon such as , or it may be labeled **CRT/LCD**.


5 If your projector and laptop don't display the same image, do the following:

Windows: Try using the **CRT/LCD** or  function key, as described above. If this doesn't work, double-click **Display** in the Control Panel. Make sure both the LCD screen and monitor port are enabled. (Allow a few seconds for the projector to sync up.) See your Windows online help for details.

Macintosh® OS X: From the **Apple** menu, select **System Preferences**, then click **Displays**. Select the **VGA Display** or **Color LCD** dialog box, click the **Arrange** (or **Arrangement**) tab, and make sure **Mirror Displays** is checked.

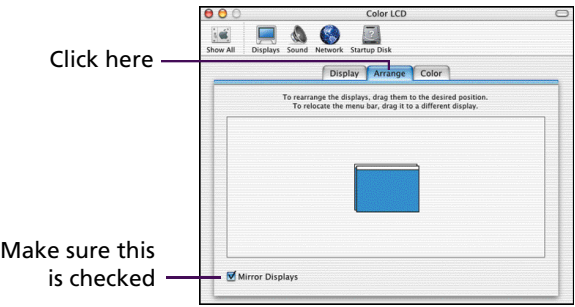

Macintosh OS 9 or earlier: From the **Apple** menu, select **Control Panels**, then click **Monitors** or **Monitors and Sound**. Click the **Arrange** icon, then drag one monitor icon on top of the other; this lets you display on both the projection screen and the LCD screen. If this option isn't available, click the **Monitor** icon and select a **Simulscan** resolution.

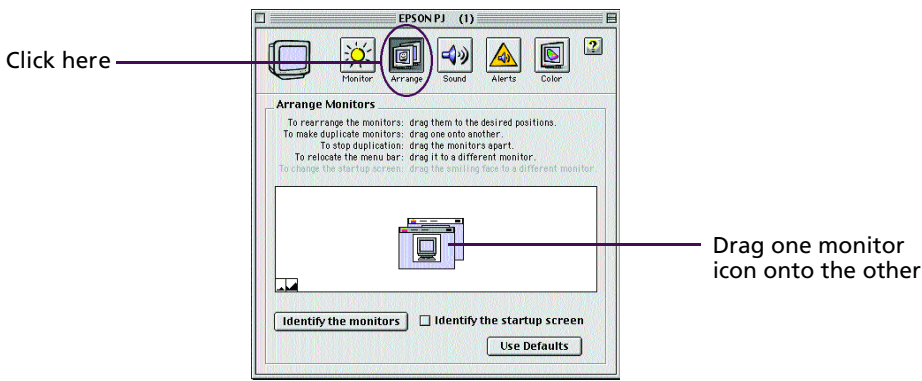

6 If you see an image but it's not displayed correctly, press the **Auto** button on the remote control to automatically readjust it.

If projecting wirelessly...


Follow the steps in this section to project over an 802.11b wireless network from a computer running Windows 98, 2000, Me, XP, or Macintosh OS X 10.2.4 or above.

NOTE: You must have already installed the projector's EasyMP software and configured your projector and computer. See the User's Guide for instructions. Also, your computer must have an 802.11b network card or transmitter installed.

1 Make sure you've turned on the projector and adjusted the image as described in sections 1 and 2 on the front of this sheet.


2 Select EasyMP as the source by pressing the **EasyMP** button on the remote control.

3 Insert the EPSON 802.11b card with the blue label facing outward, as shown. When fully inserted, the black end of the card will protrude.

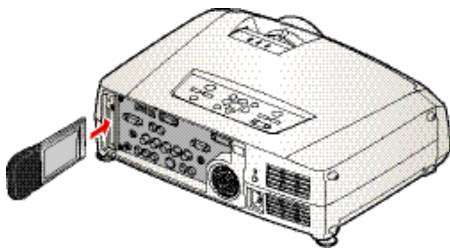


NOTE: Use only the EPSON 802.11b card. Other brands may not be compatible and are not guaranteed to work.

Once the card is inserted, you see a screen like this:

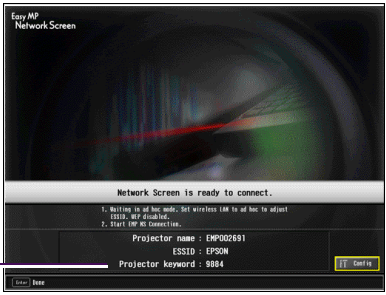


4 From the computer's Start menu, select **EMP NS Connection** (Windows), or double-click the **EMP NS Connection** icon in your Applications folder (Macintosh).

5 If you see this screen, select the name and IP address for your computer's 802.11b wireless card and click **OK**.

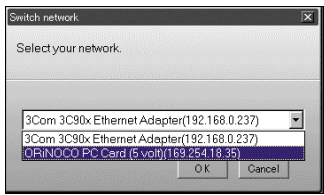

You see this screen:

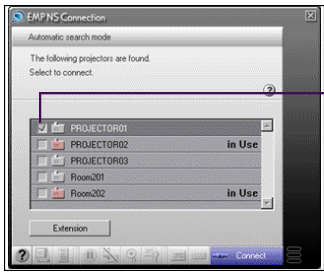


If the connection is working properly, you see your projector listed as shown. If you don't see your wireless device listed, restart your computer. If it still doesn't appear, see the *User's Guide* for help.

6 Once the name of your projector appears, select it and click **Connect**.

7 If you see a message asking for a keyword, enter the four digits that appear on the EasyMP Network Screen and click **OK**. (See the screen at the top of this column to locate the projector keyword.)

You see your computer's image transmitted to the projector, and a floating control bar appears on the screen:

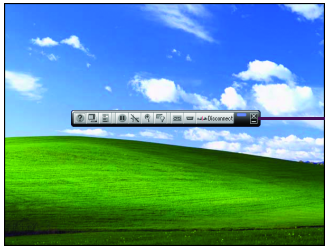

8 When done with your presentation, click **Disconnect** on the control bar.

Where To Get Help

Telephone Support Services

To use the EPSON PrivateLine® Support service, call (800) 637-7661 and enter the PIN on the EPSON PrivateLine Support card included in your Start Here kit. This service is available 6 AM to 6 PM, Pacific Time, Monday through Friday, for the duration of your warranty period. You may also speak with a projector support specialist by dialing one of these numbers:

U.S.: (562) 276-4394, 6 AM to 6 PM, Pacific Time, Monday through Friday

Canada: (905) 709-3839, 6 AM to 6 PM, Pacific Time, Monday through Friday

Toll or long distance charges may apply.

Electronic Support Services

EPSON provides assistance through electronic support services 24 hours a day at <http://support.epson.com>. For tips, templates, and training for developing successful presentations go to <http://www.presentersonline.com>.

EPSON is a registered trademark and EasyMP is a trademark of SEIKO EPSONCORPORATION. PowerLite and PrivateLine are registered trademarks of Epson America, Inc.

General Notice: Other product names are for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

© 2003 by Epson America, Inc. 12/03

CPD-16396R1
Printed in XXXXXXXXXX